

Carburetor Engine 110

- Remove closing cover (3).
- Replace fuel strainer (2), rubber sealing ring (1), aluminum sealing ring (4) and cheesehead screw. These components are combined in a repair set.
- Check for leaks.

